SHARP

EJ-CP10BJ

Slow Juicer

User's Manual

Contents

3 page Safety Precautions

4 page Product Components

5 page Preparations before use

6 page Assembly instruction

7 page How to use

8 page Helpful Tips

9 page How to disassemble and clean

10 page Cleaning Tips

11 page Troubleshooting

12 page Product specification

Safety Precautions

Please read all safety warnings carefully before use.

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that the do not play with appliance.
- To avoid electric shock;
  Do not plug or unplug the unit into a power point with wet hands,
  Only plug the unit into a correctly grounded power point,
  Hold the power plug firmly when plugging or unplugging the unit, do not pull on the power cord when unplugging,
  Do not submerge or hold the unit under running water when cleaning,
  Never use the appliance if the power cord or power plug is damaged,
  To avoid damage to the power cord, avoid severe twists and bends in the power cord.
- If the unit jams and stops during use, switch the unit into reverse for around 3 seconds, then back to “on” this should dislodge the food causing the jam.
- To avoid injury and damage, never disassemble the machine during use.
- Do not block the pulp outlet while the unit is operating.
- Use both hands when moving or lifting the unit, it weighs around 5kg.
- Keep out of reach of children.
- Never operate the machine when it is disassembled, it should only be used when it is fully assembled.
- Never put your fingers or any body parts into the unit when it is operating, only use the “pusher” assist foods as required.
- Do not use the product for more than 20 minutes at a time, excessive use can cause overheating which can lead to motor failure.
- Always operate the unit on a flat firm surface suitable for kitchen appliances.
- Do not operate the unit if;
  There are any unusual odours, heat or smoke,
  The unit has been dropped or has any signs of damage,
  The “squeezing” screw has been damaged
- Do not attempt to make any repairs to the unit yourself, repairs should be carried out by a qualified person.
- Do not operate the unit without fruit or vegetables for more than a few seconds, some parts can become damaged due to lack of lubrication.
- Clean the product thoroughly after use.

Product Components

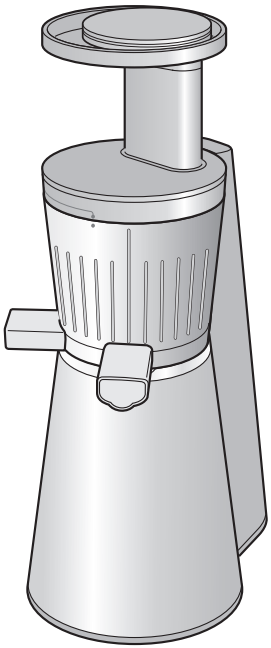

Pusher

Hopper

Squeezing Screw

Drum

Pulp outlet

Juice outlet

2 Pitchers

Cleaning brush

Main Body

Preparations before use

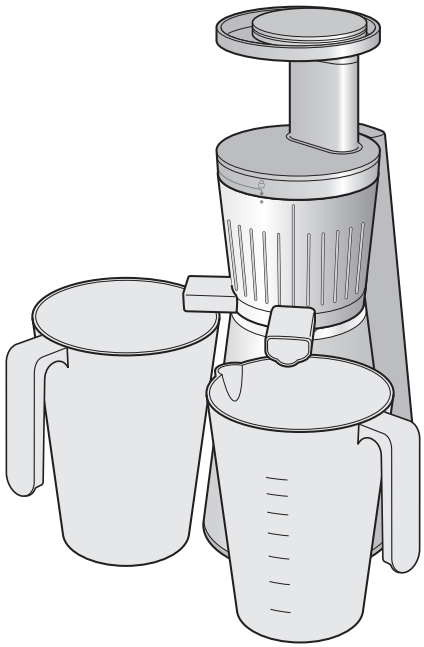

Place and use the appliance on a dry, stable, level, and horizontal surface.

Connect the power cord.

Place container under each ejections (Juice/Pulp outlets).

Rubber pad installation

Place the rubber pad until it reaches the line inside.

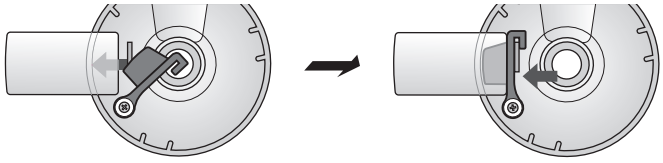

Ensure that the rubber pad underneath the drum is closed all the way each time before use.

Assembly instruction

1

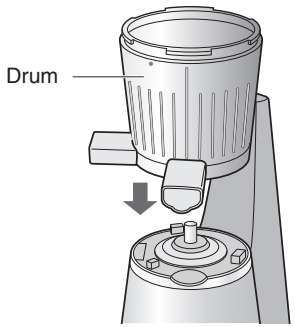

1. Assemble the drum on the Main Body.

① Make sure the drum all the way into the shaft of the main body.

2

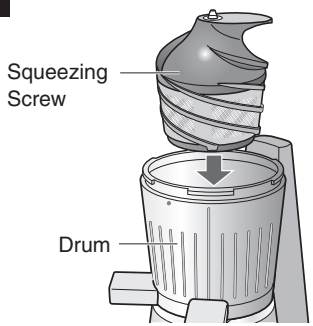

2. Place and push the squeezing screw into the centre of the drum.

3

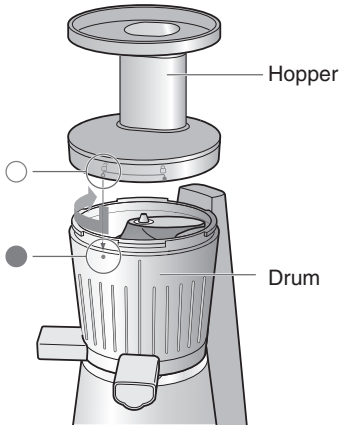

3. Assemble the hopper onto the Drum.

① Make sure 'open dot' (○) on the hopper points to 'dot' (●) on the drum.

② Turn the hopper clockwise until it clicks into the drum.

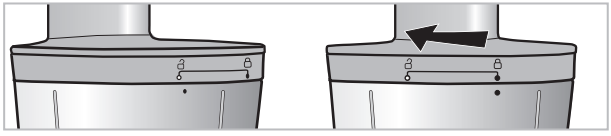

Reverse the steps carefully when disassembling.

IMPORTANT

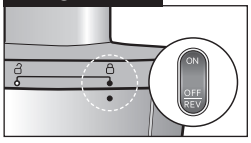

For proper operation, 'close dot' (●) on the hopper should be aligned with 'dot' (●) on the drum.

How to use

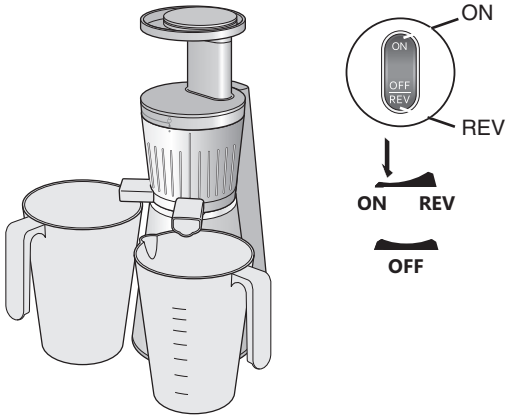

3 Operational buttons

- "ON" activates the motor and starts making juice.
- "REV" means reverse operation. Use this button when something is stuck. It will remove the clogged material.
- "OFF" stops the operation. Place the button at the centre to turn off the product.

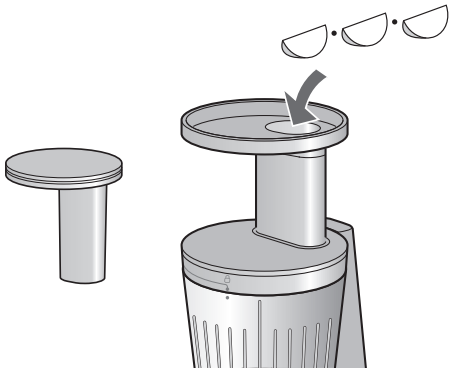

Rinse every fruit or vegetables thoroughly before putting them into the machine.

After rinsing, put ingredients slowly into the machine. Use the pusher if necessary. Remove any hard seeds from ingredients before juicing.

We recommend not to juice fruits and vegetables over 1kg at once as the pulp may be blended into the juice.

Please ensure to turn off the machine after juicing.
Only touch the power button with dry hands.

Warning

Refrigerate the unused leftover juice.
Do not operate the product with wet hands.
Do not operate the product with empty drum.

Helpful Tips

Do not use the product longer than 20 minutes.	Otherwise, serious product damage may occur.
Remove any hard seeds from fruit or vegetables.	Otherwise, serious product damage especially on the screw may occur.
Do not insert too much ingredients./ Do not insert ingredients too fast.	Otherwise, juice may leak upwards.
Do not use any utensils other than the pusher.	Otherwise, serious product damage may occur.

When the machine is inoperable, follow the next steps.

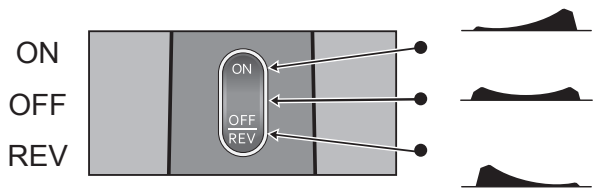

1. Turn off the machine.
2. Run the product in “REV” mode for a few seconds.
3. Operate the product again.
4. If “REV” mode is inoperable, turn off and disassemble the product. Then, reassemble the product by instructions.
5. Activate the product again.

Warning The power button should be completely dried before the product is operated.

How to disassemble and clean

1 Turn machine “OFF”.

2

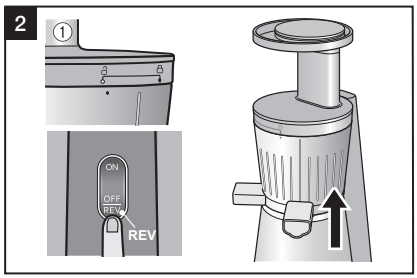

Grab and twist the hopper to unlock.
Make sure ‘open dot’ (◯) on the hopper is aligned with ‘dot’ (●) on the drum before pulling off the drum.

3

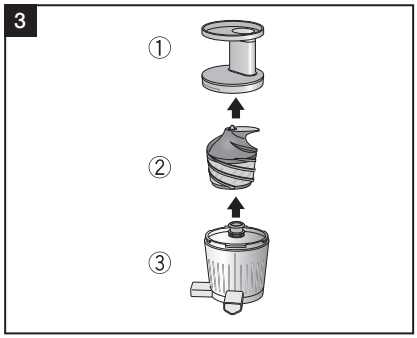

Disassembly order

① Hopper
② Squeezing Screw
③ Drum

4

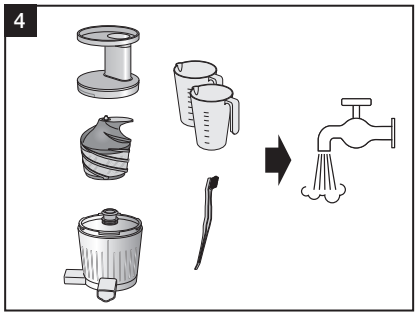

Use the brush to clean the squeezing screw thoroughly after operating.

Warning
Use smooth and wet towel for cleaning.
Do not use dishwasher or high-temperature cleaner for cleaning.

5 Dry all the product parts after cleaning.

Warning
Do not dry the product parts with heating appliance.
To reduce mould build up ensure all removale parts are cleaned throughly.

Cleaning Tips

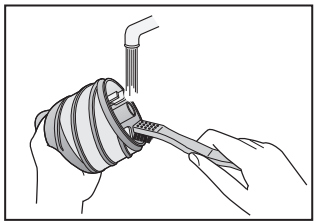

Clean the inside and outside of the squeezing screw with the brush provided.

- Clean and wash the product right after use.

Tip

Rinse the squeezing screw under running water after cleaning with the brush.
The remaining pulp will be washed out.

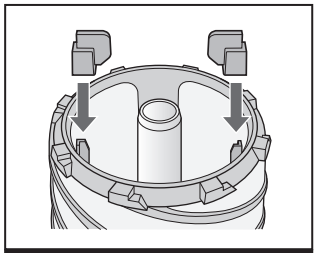

Pull out the rubber pad gently.
Push in the rubber pad gently in its place.

You can also clean the inside of the squeezing screw after detaching the rubber pad.
Doing so will be more hygienic.

Tip

- Do not use detergents that contain organic solvents (solvent, thinner, etc), bleach, chlorine, benzene or abrasives.
- Do not keep the product without cleaning after use. Please remove pulp immediately or within 5 minutes after juicing.
- Do not rinse the main body under running water.

Troubleshooting

Users might improperly operate the product due to their unfamiliarity with how to use the product. Check the following items to resolve such issues. If issues cannot be resolved using these procedures, please contact the service centre.

Problem	Check	Possible Solutions
The product is not working.	• Is the power cord connected?	Check whether the power cord is plugged into a 230 V to 240 V~, 50 Hz/60 Hz wall outlet.
	• Is the Juicer assembled correctly?	Assemble the product as described in this user's manual (refer to p. 6).
	• Has the power gone off?	Assemble the product as described in this user's manual (refer to p. 6).
	• Have you operated the Juicer for over 20 minutes?	Turn off the product. Wait for a while and reactivate the product. If you want to use the product continuously, pause the operation for 1 hour.
The juice is too thick or thin.	• Did you assemble the rubber pad correctly?	Assemble the rubber pad as described in this user's manual (refer to p. 5 'Rubber pad installation').
	• Did you use fresh ingredients?	Overripe fruits or vegetables may clog in the motor. If you want to use the overripe ingredients, use them after soaking in mineral water for 10 minutes or more.
	• Did you put too many ingredients or anything else into the machine?	Do not put too many ingredients or any liquids into the machine.
		We recommend you to clean the machine after 1 kg of juicing. Disassemble the Drum and wash it.
The Drum cover is too hard to open.	• How did you open the Drum cover?	Press the REV button and open the Drum toward "OPEN". * Check directions when opening the drum.
The product stops while in operation.	• Did you force food into the juicer?	Do not insert too much ingredients.
	• Did you put the ingredients with hard seeds?	Press the REV button for 2 to 3 seconds and then press the ON button again. * After following the step above, if the Squeezing Screw does not rotate, stop using the product. Turn off the product, disassemble and clean it. Then reassemble and use your Juicer again.
The motor is running with loud noise and shaking.	• Did you check that all parts are assembled properly and in correct position?	If the product is assembled properly, it is normal to make noise in juicing from overripe fruit and vegetables. Turn the product off and clean the receptacle.
The receptacle is vibrating in use.	• This is normal to make juice. If the product overheats, contact the local service centre.	

Product specification

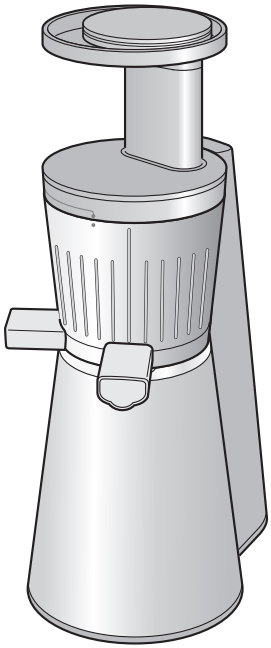

Specification

Model Name		EJ-CP10BJ
Voltage		230 V ~ 240 V
Frequency		50 Hz ~ 60 Hz
Power Consumption		150 W
RPM		32 Rpm
Elecrtical cord length		1400 mm
Motor		DC Motor
Weight		4.8 kg
Dimensions	Width	150 mm
	Length	194 mm
	Height	435 mm
Standard usage time		Less than 20 minutes continuously

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions in this manual.
- Only use the product when you are familiar with all instruction and operating procedures.
- This appliance is intended for household use, do not put anything other than foods recommended in this book into the appliance.
- Unplug the unit from the power outlet when not in use and before cleaning.
- Only use the attachments provided with the product.
- Do not use outdoors, the unit is designed for indoor use only.
- Do not use the product next to a heater or heating device.

SHARP

WARRANTY

Consumer Electronic Products

Congratulations on Your Purchase!

This Sharp product is warranted against faults in material and manufacture for the period as stated in the table below.

If service is required during the warranty period, please contact your nearest Sharp Approved Service Centre. These repairs would be carried out at no charge to the owner, subject to the conditions specified herein.

This warranty does not extend to defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, lack of maintenance, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim. This warranty is in addition to and in no way limits, varies or excludes any implied rights and remedies under any relevant legislation in the country of sale.

This warranty does not cover transportation to and from the Sharp Approved Service Centre. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. The repair of your goods may result in the loss of user generated data, please ensure that you have saved this data elsewhere prior to repair.

Australian customers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The criteria of a major failure is defined in the Australian Consumer Law. Should you require any assistance with a major failure please contact Sharp Customer Care.

WARRANTY PERIODS

Home Theatre Projector	12 months (excluding lamps and air filters)
Audio/Home Theatre	12 months
Microwave / Steam Oven	12 months
Slow Juicer	12 months
Refrigerator	24 months
DVD/Blu-ray	12 months
Air Conditioner	60 months
Portable Air Conditioner	12 months
LCD Television	36 months
Air Purifier	12 months
Washing Machine	24 months

SHARP

SHARP CORPORATION OF AUSTRALIA PTY. LIMITED
ABN 40 003 039 405
1 Huntingwood Drive
Huntingwood NSW 2148

SHARP CORPORATION OF NEW ZEALAND LIMITED
59 Hugo Johnston Drive
Penrose, Auckland

SPform 040 (JUNE 2013)

IMPORTANT NOTICE: This warranty applies only to products sold in Australia & New Zealand

SHARP

FOR LOCATION ENQUIRIES WITHIN

AUSTRALIA

REGARDING YOUR LOCAL

SHARP APPROVED SERVICE CENTRE

VISIT OUR WEBSITE AT

www.sharp.net.au

OR CALL SHARP CUSTOMER CARE

1300 135 022

(LOCAL CALL COSTS APPLY WITHIN AUSTRALIA)

SHARP CORPORATION OF AUSTRALIA PTY LTD

SHARP

FOR LOCATION ENQUIRIES WITHIN

NEW ZEALAND

REGARDING YOUR LOCAL

SHARP APPROVED SERVICE CENTRE

VISIT OUR WEBSITE AT

www.sharp.net.nz

CONTACT YOUR SELLING DEALER/RETAILER

OR CALL

SHARP CUSTOMER SERVICES

TELEPHONE: 09 573 0111

FACSIMILE: 09 573 0113

SHARP CORPORATION OF NEW ZEALAND LIMITED

SPform019(AUGUST 2011)

SHARP

OM-EJCP10B-J31